ELCO Lighting
Innovation Beyond Expectation

ELCO Lighting
Koto™ Trimless Downsizer Ring
Installation Instructions

WARNING:

Risk of electric shock. Before installation, disconnect power to the luminaire. Failure to do so may result in electric shock and lead to injury or death.
Risque de choc électrique. Avant l'installation, débranchez l'alimentation au luminaire. Ne pas le faire peut entraîner un choc électrique et entraîner des blessures, voire la mort.

CAUTION:

For your safety, read and understand instructions completely prior to installation. Installation requires knowledge of luminaires electrical system. If not qualified, DO NOT attempt installation. Contact a qualified electrician if necessary.
Pour votre sécurité, lisez et comprenez entièrement les instructions avant l'installation. L'installation nécessite une connaissance du système électrique des luminaires. Si vous n'êtes pas qualifié, NE PAS tenter l'installation. Contactez un électricien qualifié si nécessaire.

NOTE: Before beginning the installation, carefully unpack and identify all parts. **Save these instructions as you may need them at a later date.**

DISCLAIMER: This product is intended for use with ELCO Koto™ Trimless spackle frames and flush mount adaptor rings. Maximum opening size is Ø9".

Step 1. Clear the area around the opening and smooth out rough edges. The downsizer ring works best when installed against smooth, flat surfaces.

Step 2. Center the downsizer ring with the opening in the ceiling and make sure there is sufficient material on all sides of the opening **Fig. 1**.

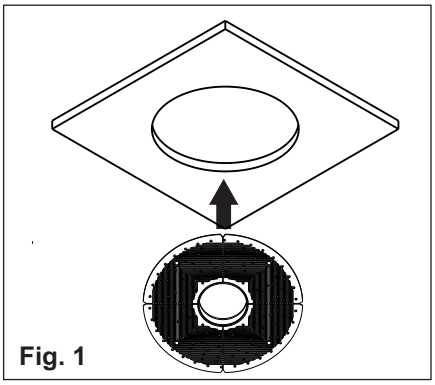
Step 3. Hold the downsizer ring flush against the ceiling and screw it into place using #8 or #10 drywall screws. **Fig. 2**. **Note: Drywall screws must not be longer than 3/4".**

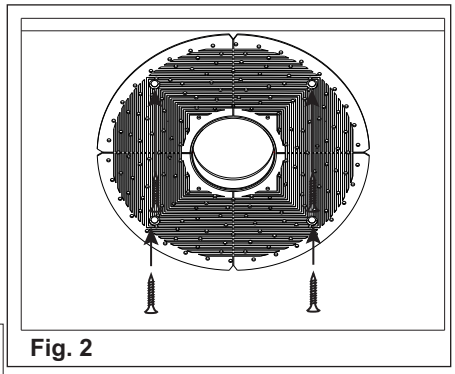
Step 4. Apply plaster over the downsizer ring and spackle frame without letting any of the plaster into the hole opening of the housing. Use provided cardboard cutout to cover the hole opening while plastering if necessary **Fig. 3**.
Disclaimer: Any plastering or ceiling work must be done by a professional drywaller.

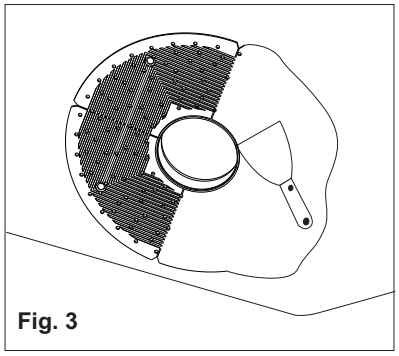
Step 5. Install the Koto™ LED Module onto the trim **Fig. 4**.
Disclaimer: Trim must be used with its intended spackle frame.

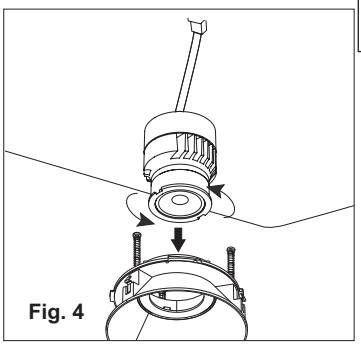
Step 6. Mate the connector on the Koto™ LED Module with the connector coming from the housing **Fig. 5**.

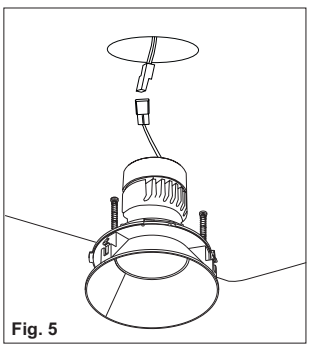
Step 7. Insert the LED module trimless assembly through the opening of the spackle frame until fully engaged. The opening edge of the reflector should be flush with the face of the spackle frame **Fig. 6**.

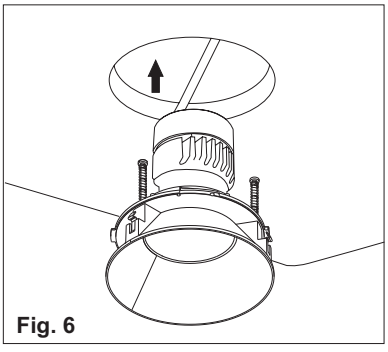

Fig. 1


Fig. 2


Fig. 3


Fig. 4


Fig. 5


Fig. 6

2042 East Vernon Ave. Vernon, CA 90058 • Tel: (323) 231-2600 Fax: (323) 231-3200 □ www.elcolighting.com

ALL RIGHTS RESERVED © ELCO Lighting 2026