ELCO Lighting

INSTALLATION INSTRUCTIONS

5 & 6 in LED DOWNLIGHT - MODEL EL610CT5, EL611CT5, & EL612CT5

Rated Voltage 120V, 60Hz

(Z indicates the style of trim, X indicates the colour temperature, Y indicates the colour of product)

Please read carefully and save these instructions as you may need them at a later date.

WARNING - RISK OF ELECTRIC SHOCK. DISCONNECT MAIN POWER AT FUSE OR CIRCUIT BREAKER BEFORE INSTALLING OR SERVICING THE FIXTURE.

GENERAL: All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.

Remove the KIT from the box and make sure that no parts are missing by referencing the PARTS illustrations.

THIS RETROFIT ASSEMBLY IS ACCEPTED AS A COMPONENT OF A LED LUMINAIRE WHERE THE SUITABILITY OF THE COMBINATION SHALL BE DETERMINED BY CSA OR CANADIAN AUTHORITIES HAVING JURISDICTION.


THIS DEVICE IS NOT INTENDED FOR USE WITH EMERGENCY EXITS.

PARTS




SOCKET ADAPTER

ASSEMBLY

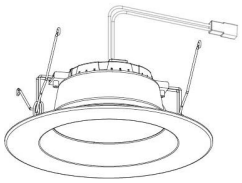

RETROFIT KIT

COMPATIBLE HOUSING DIMENSIONS

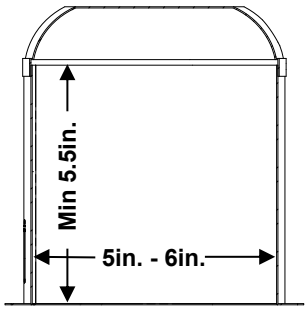

WARNING- RISK OF FIRE OR ELECTRIC SHOCK

•LED Retrofit Kit installation requires knowledge of luminaires electrical systems. If not qualified, do not attempt installation. Contact a qualified electrician.

•Install this kit only in luminaires that have the construction features and dimensions shown in the photographs and/or drawings and where the input rating of the retrofit kit does not exceed the input rating of the luminaire.

•Do not make or alter any open holes in an enclosure of wiring or electrical components during kit installation.

•To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.

ASSEMBLY AND INSTALLATION

INCANDESCENT HOUSINGS

1.Unscrew the WING NUT inside the CAN to detach the SOCKET BRACKET from the CAN. Disengage the SOCKET from the SOCKET BRACKET. **(FIG. 1)**

2.Thread the SOCKET ADAPTER into the SOCKET. **(FIG. 2)**

3.Plug the FEMALE CONNECTOR of the RETROFIT KIT onto the MALE CONNECTOR of the SOCKET ADAPTER ASSEMBLY. **(FIG. 3)**

4.Squeeze both TORSION SPRING arms together and insert into the CAN. (**FIG. 3)**

5.Tuck all wires into the CAN and carefully push the RETROFIT KIT into CAN. (NOTE: To provide enough room in shallow cans, carefully position SOCKET ADAPTER and SOCKET adjacent to the side of the LED DRIVER prior to inserting the RETROFIT KIT into the CAN.) **(FIG. 2 & 3)**

LED HOUSINGS

1.Plug the FEMALE CONNECTOR of the RETROFIT KIT onto the MALE CONNECTOR of the LED HOUSING. **(FIG. 3)**

2.Squeeze both TORSION SPRING arms together and insert into the CAN. Tuck all wires into the CAN and carefully push the RETROFIT KIT into CAN. **(FIG. 2 & 3)**

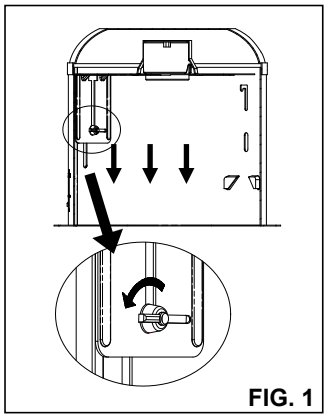


FIG. 1

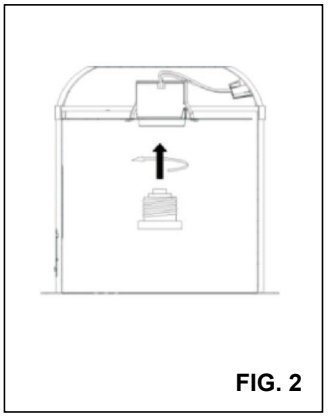


FIG. 2

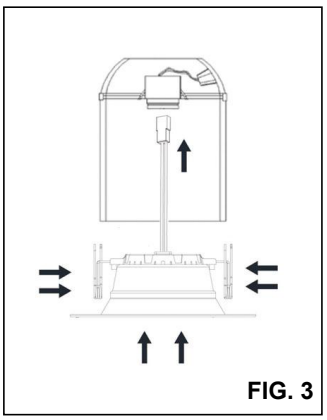


FIG. 3

ALL RIGHTS RESERVED ⊠ ELCO lighting 2019

If you want to install in 5 inch housing,please see below installation way:
1.Unsrew the screws (FIG.4)
2.Remove the springs to 5 inch installation hole,then screw on (FIG.5&6)

FIG.4

6 inch

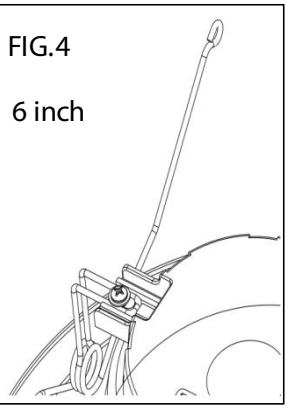


FIG.5



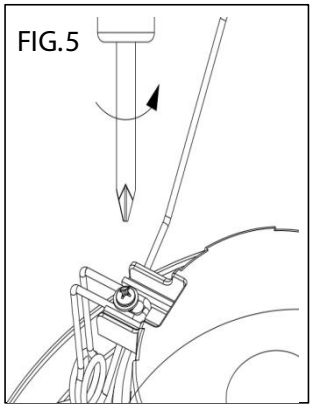


FIG.6

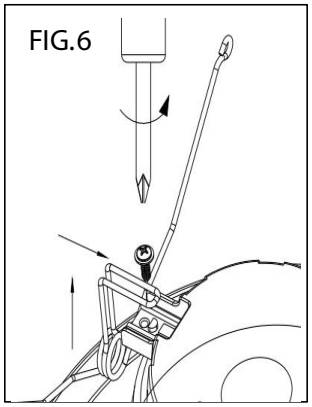

5 inch

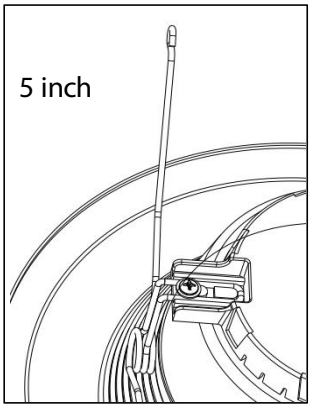

ALL RIGHTS RESERVED ⊠ ELCO lighting 2019