ELCO Lighting
Innovation Beyond Expectation

Pendant Fixture Adapter Track Accessory
EP815
Installation Instructions

WARNING:
Risk of electric shock. Before installation, disconnect power to the luminaire. Failure to do so may result in electric shock and lead to injury or death.
Risque de choc électrique. Avant l'installation, débranchez l'alimentation au luminaire. Ne pas le faire peut entraîner un choc électrique et entraîner des blessures, voire la mort.


CAUTION:
For your safety, read and understand instructions completely prior to installation. Installation requires knowledge of luminaires electrical system. If not qualified, DO NOT attempt installation. Contact a qualified electrician if necessary.
Pour votre sécurité, lisez et comprenez entièrement les instructions avant l'installation. L'installation nécessite une connaissance du système électrique des luminaires. Si vous n'êtes pas qualifié, NE PAS tenter l'installation. Contactez un électricien qualifié si nécessaire.

NOTE: Before beginning the installation, carefully unpack and identify all parts. **Save these instructions as you may need them at a later date.**

WARNING: The maximum weight of each pendant adapter can sustain is 25 lbs only for chain-hung styled pendant light and 10 lbs only for cord-hung styled pendant light. Maximum wattage rating is 300 watts.


To connect with the Chain-hung styled Pendant Light:


1. Remove the top cover by loosening the screws.
2. Choose a certain length of chain you desire, and spread one end link of chain to clamp securely to the loop.
3. Insert 2 wires and cooper ground wire from the light fixture through the chain links, and the hole of loop.
4. Make a knot, and under the knot, clamp the Hot and Neutral wire from the light fixture by a strain relief.
5. Wiring : Connect Hot wire from the fixture to Black wire from the top cover, Neutral wire from the fixture to White wire from the top cover, Cooper ground wire from the fixture to Green ground wire from the top cover with the wire connectors provided.
6. Install the top cover back by tightening the screws.

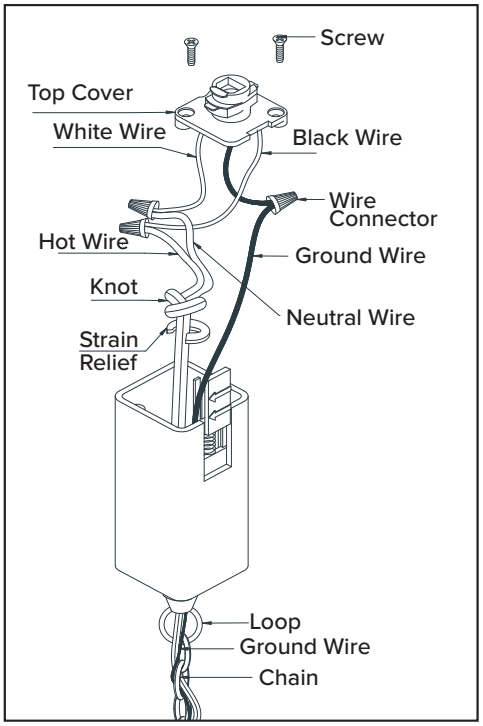

To connect with the Cord-hung styled Pendant Light:

1. Remove the top cover by loosening the screws.
2. Insert cord from the light fixture into the hole of fitting.
3. Make a knot, and under the knot, clamp the 3 wires from the light fixture by a strain relief.
4. Wiring : Connect Black wire from the fixture to Black wire from the top cover, White wire from the fixture to White wire from the top cover, Green ground wire from the fixture to Green ground wire from the top cover with the wire connectors provided.
5. Install the top cover back by tightening the screws.

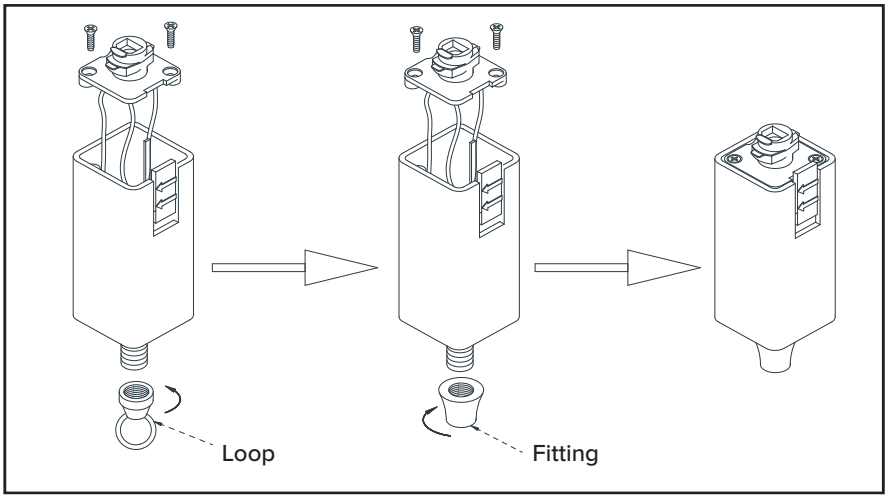

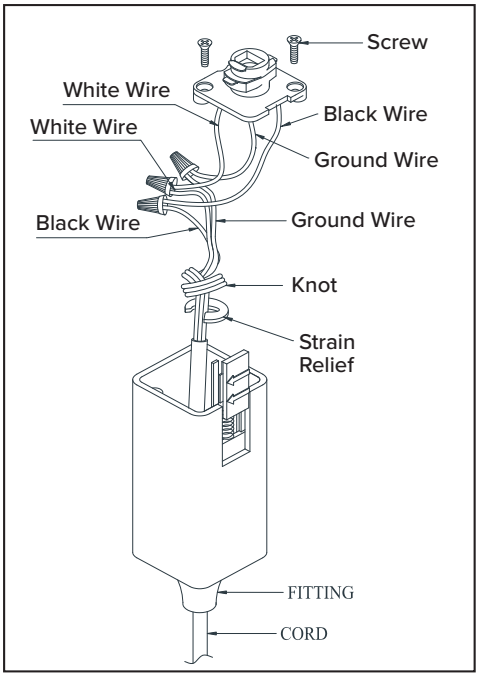

How to convert the Pendant Adapter from Chain-hung to Cord-hung:

1. Open the top cover, hold the nut inside the housing and rotate loop counterclockwise.
2. Cut the loop off of the fitting to allow the pendant cord to pass through.
3. Hold the nut inside the housing and rotate the fitting TIGHTLY clockwise. Install cover back.

2042 East Vernon Ave. Vernon, CA 90058 • Tel: (323) 231-2600 Fax: (323) 231-3200 www.elcolighting.com

ALL RIGHTS RESERVED © ELCO Lighting 2026